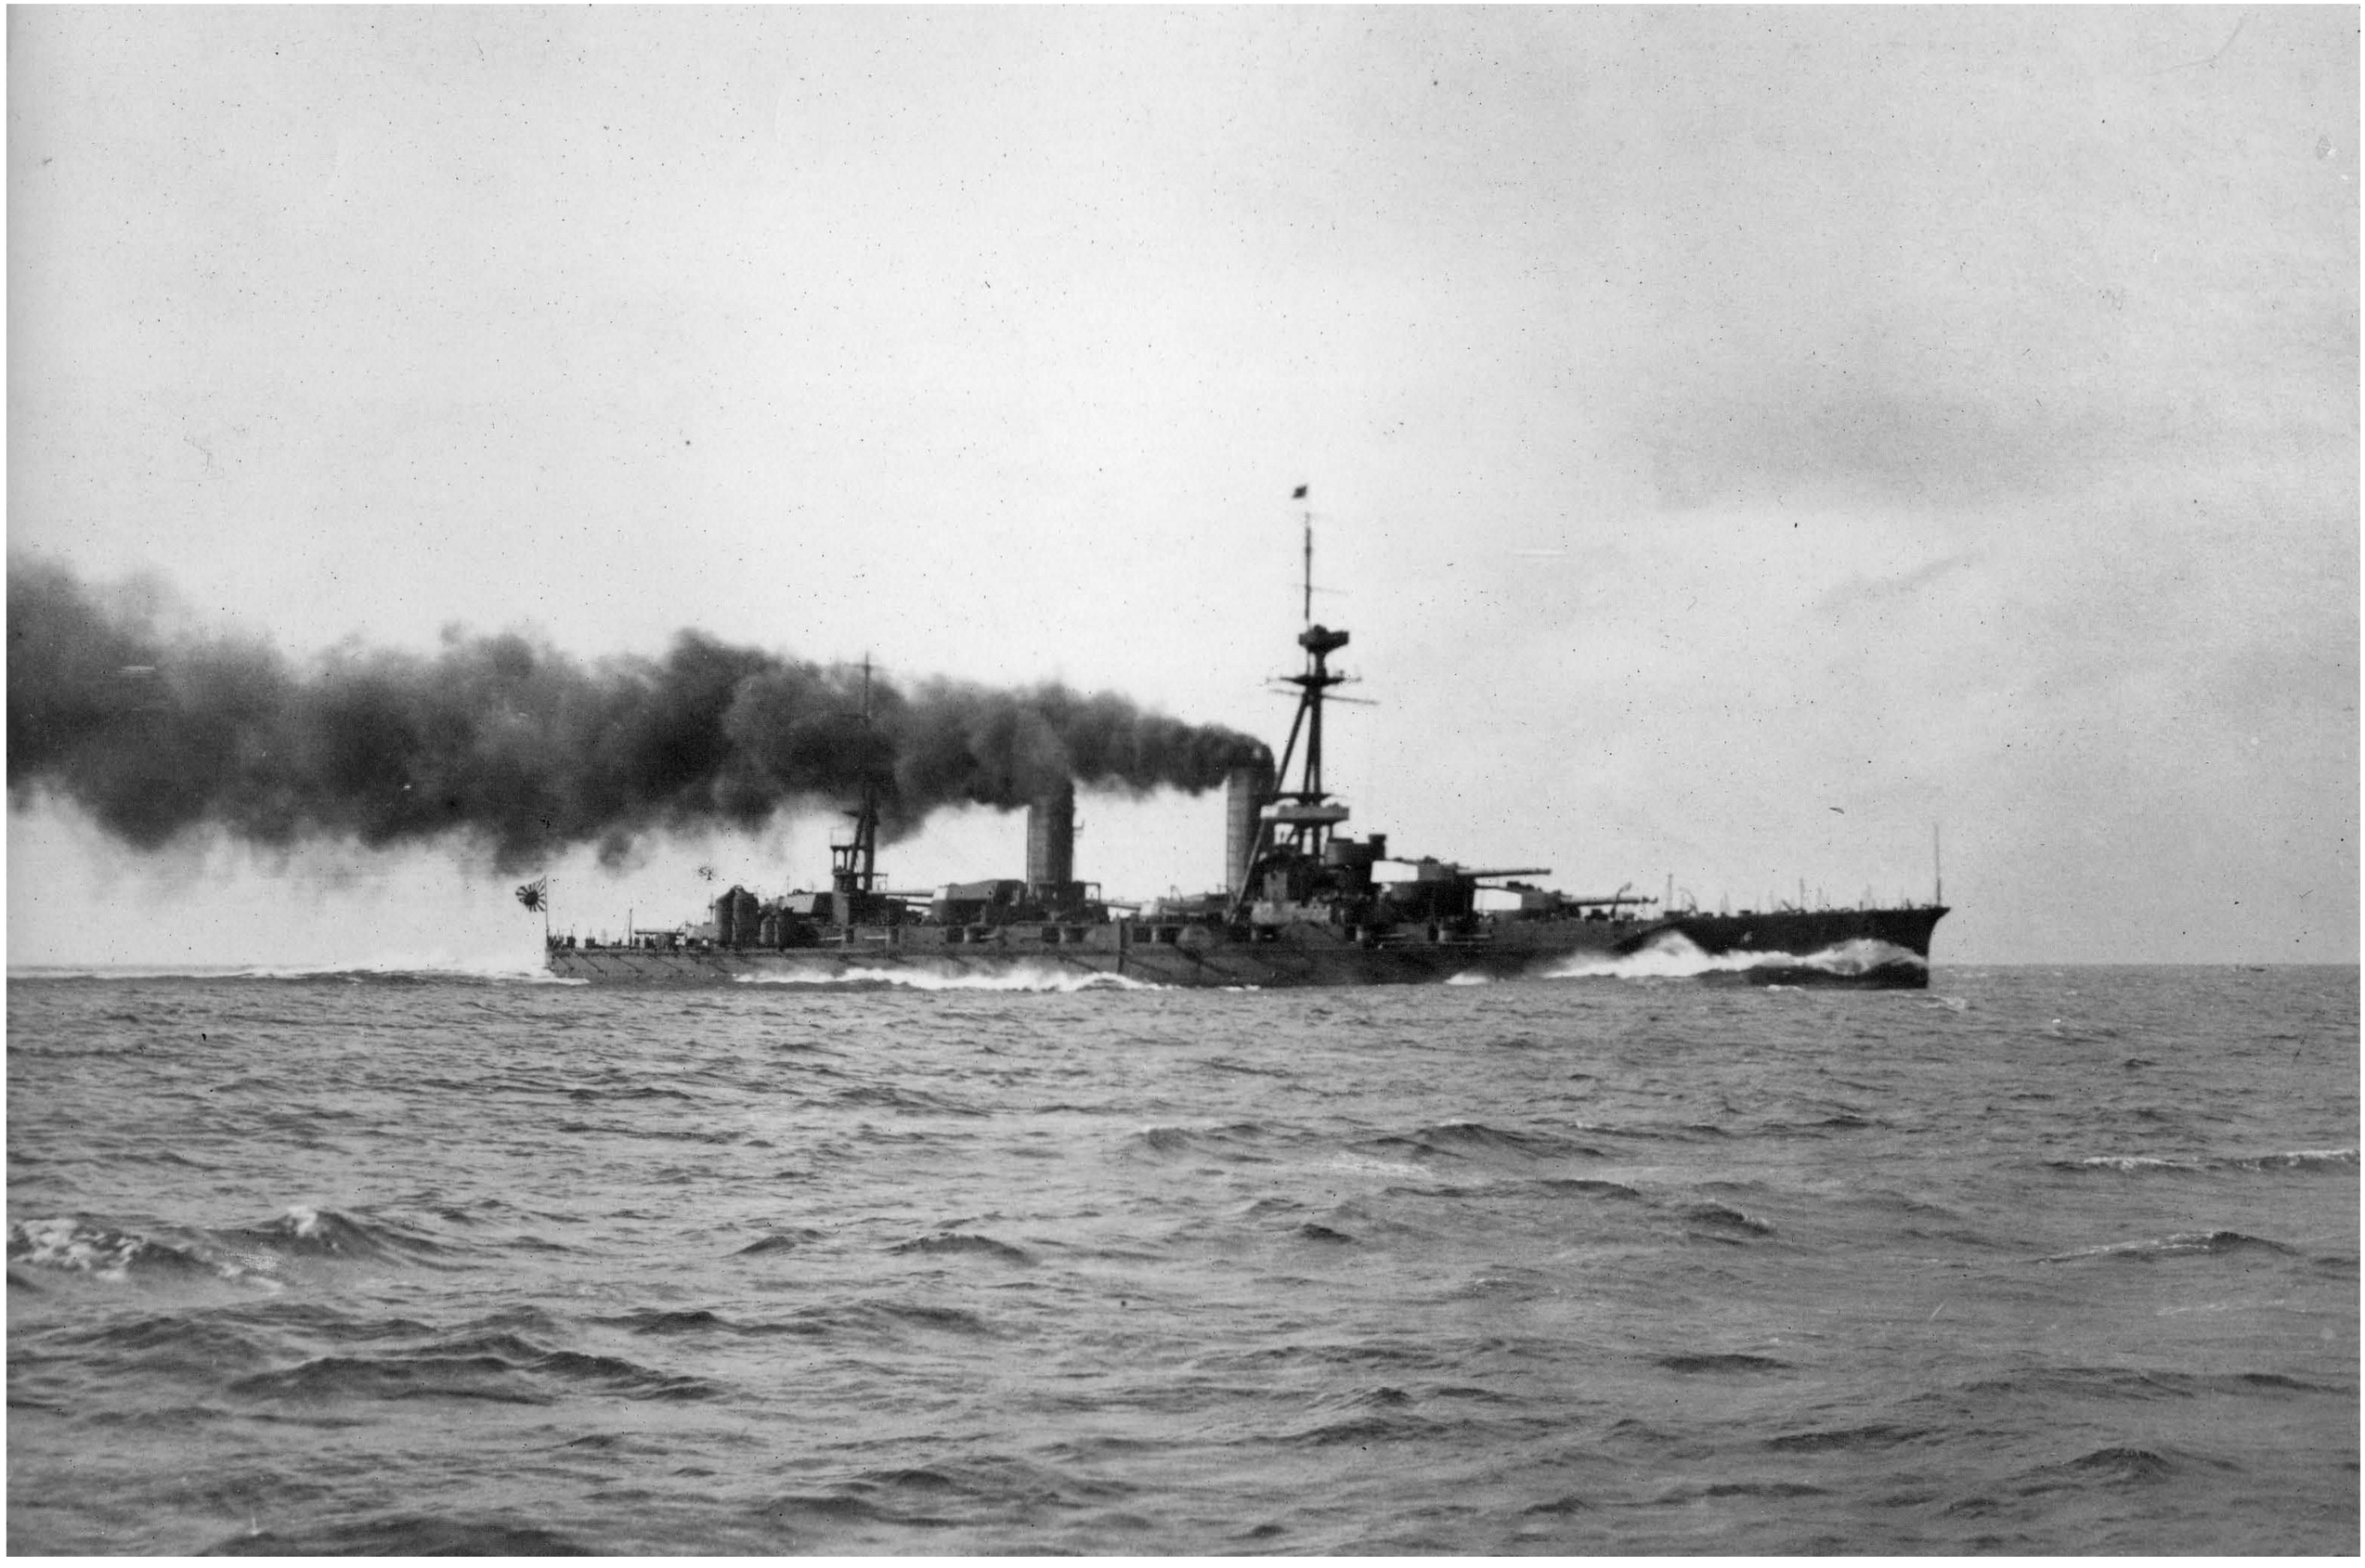

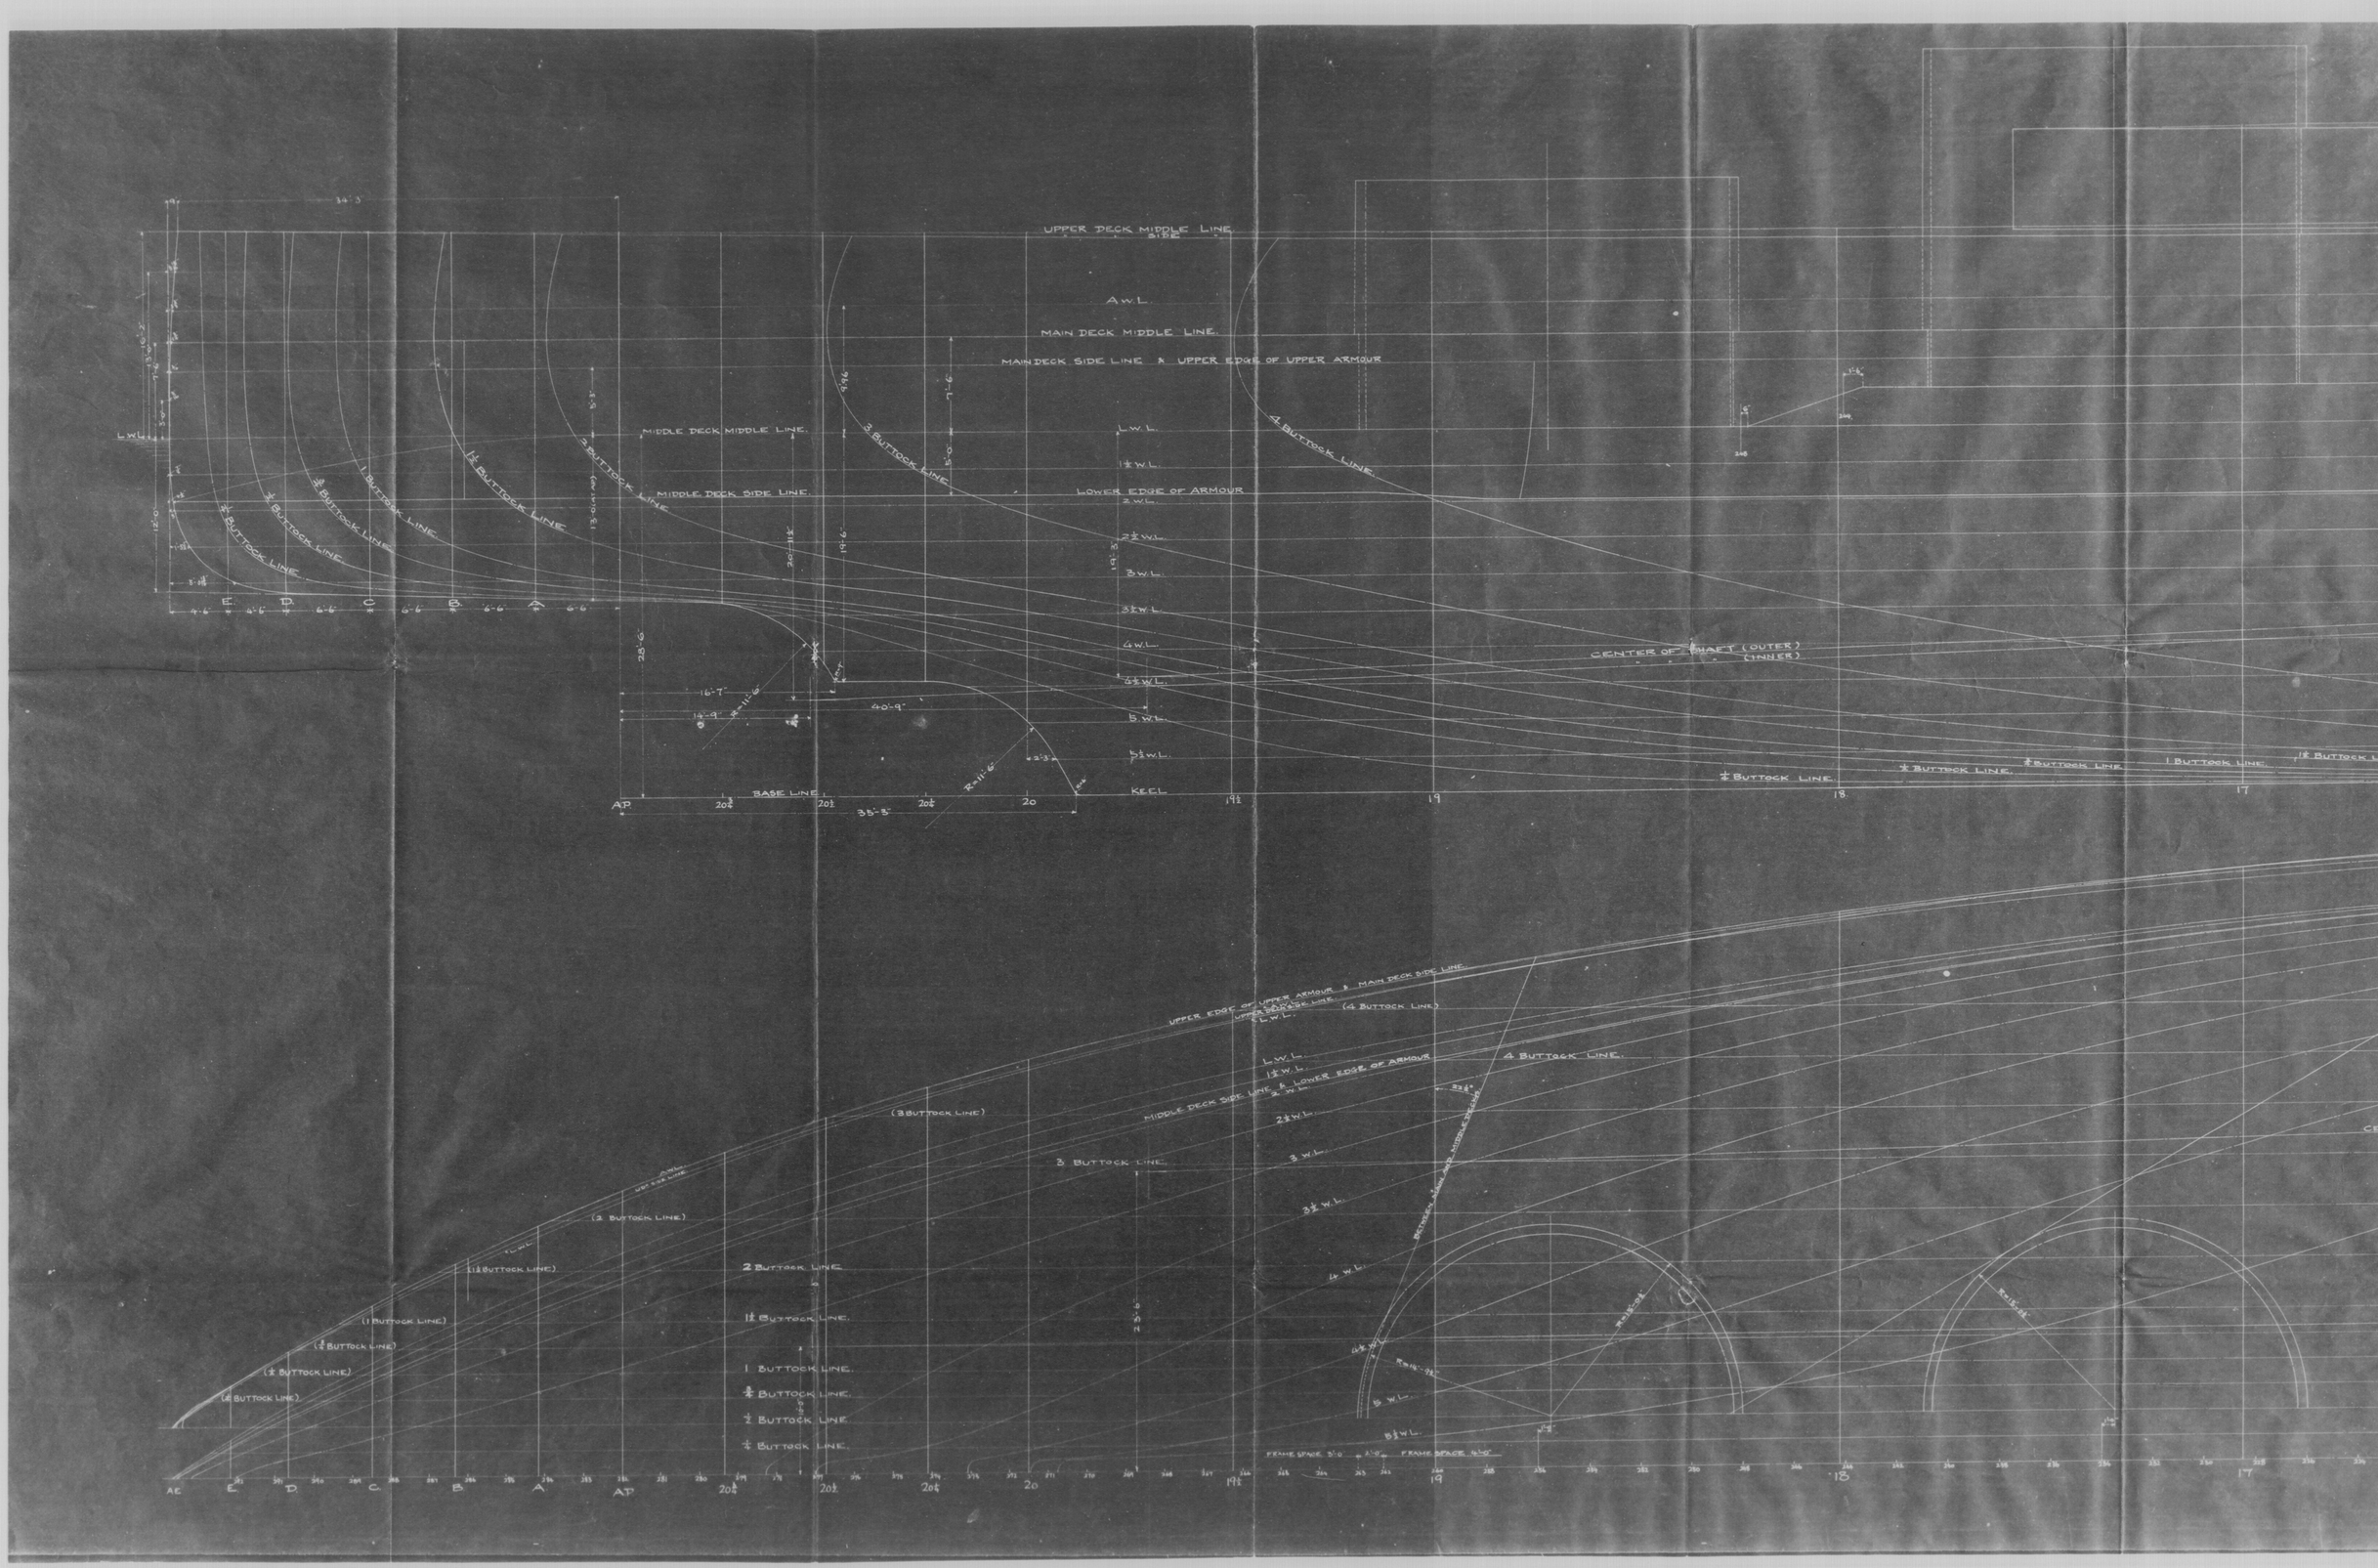
UPPER DECK MIDDLE LINE
SIDE
A.W.L.
MAIN DECK MIDDLE LINE
MAIN DECK SIDE LINE & UPPER EDGE OF UPPER ARMOUR
MIDDLE DECK MIDDLE LINE
MIDDLE DECK SIDE LINE
LOWER EDGE OF ARMOUR
L.W.L.
1½ W.L.
2 W.L.
2½ W.L.
3 W.L.
3½ W.L.
4 W.L.
4½ W.L.
5 W.L.
5½ W.L.
KEEL
BASE LINE
CENTER OF SHAFT (OUTER)
(INNER)
1 BUTTOCK LINE
1½ BUTTOCK LINE
2 BUTTOCK LINE
3 BUTTOCK LINE
4 BUTTOCK LINE
(1 BUTTOCK LINE)
(2 BUTTOCK LINE)
(3 BUTTOCK LINE)
(4 BUTTOCK LINE)
MIDDLE DECK SIDE LINE & LOWER EDGE OF ARMOUR
FRAME SPACE 3'-0"
FRAME SPACE 4'-0"
AP
20
19
18
17

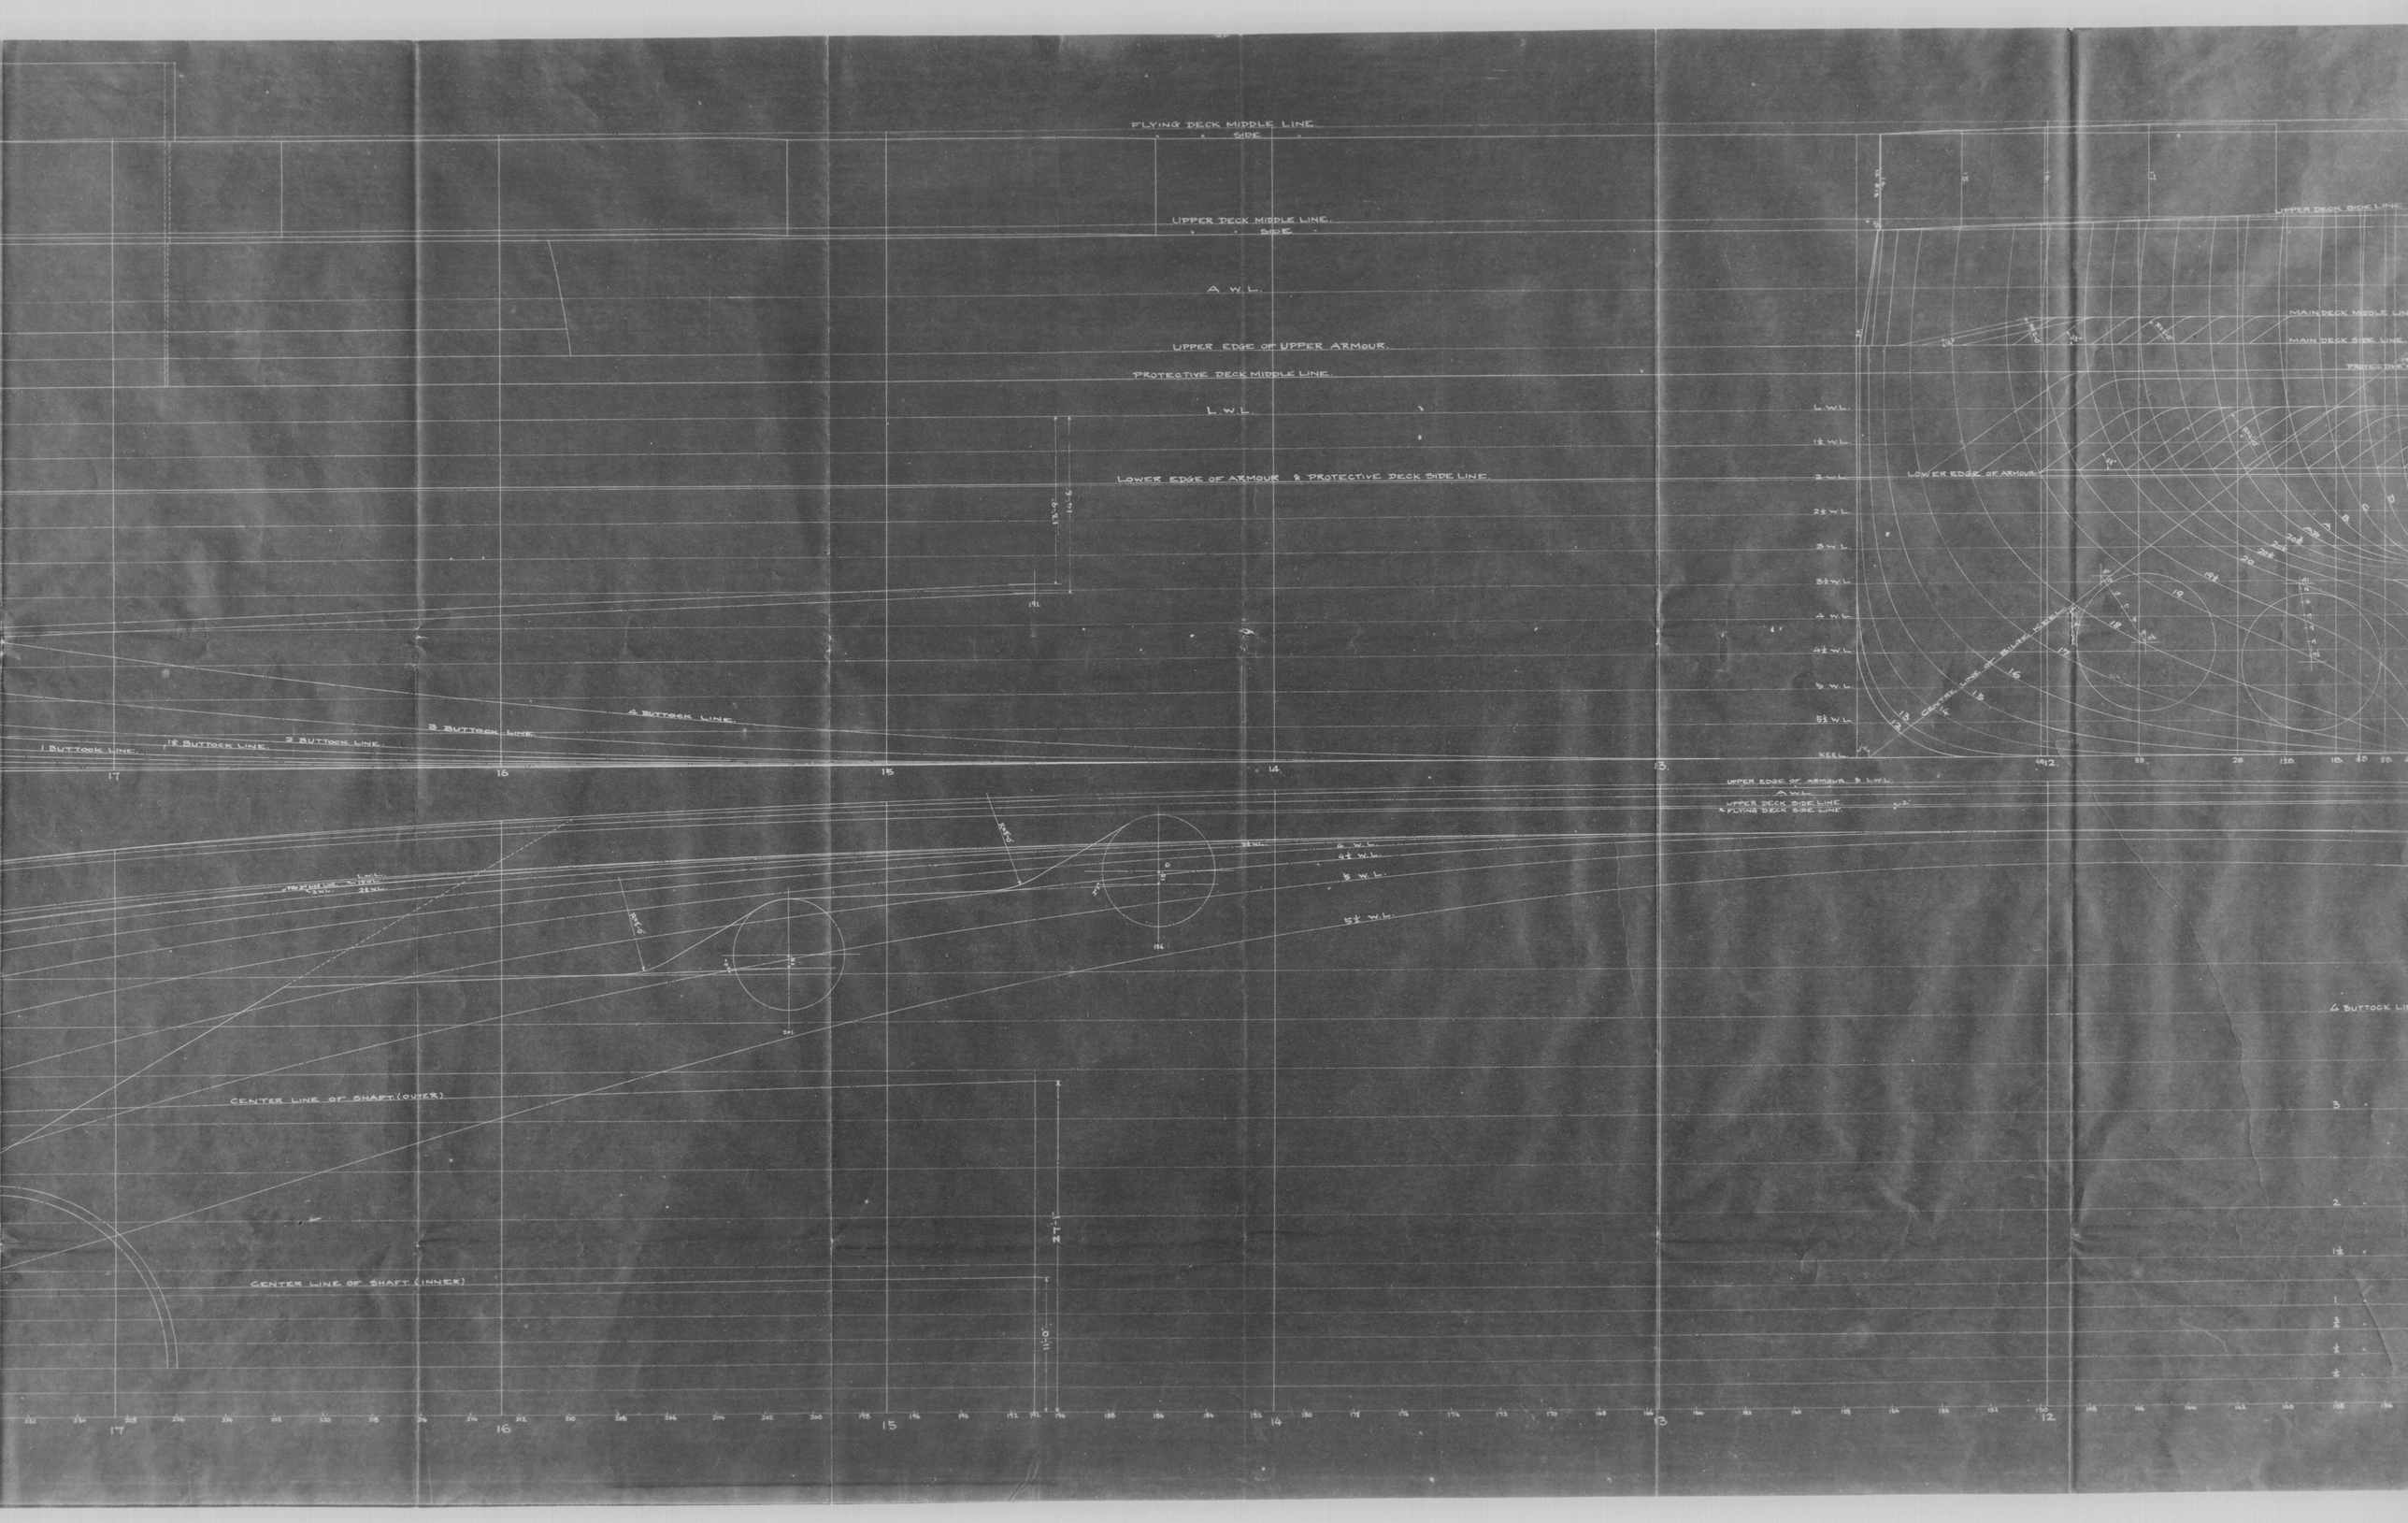

FLYING DECK MIDDLE LINE.
SIDE
UPPER DECK MIDDLE LINE.
SIDE
A.W.L.
UPPER EDGE OF UPPER ARMOUR.
PROTECTIVE DECK MIDDLE LINE.
L.W.L.
LOWER EDGE OF ARMOUR & PROTECTIVE DECK SIDE LINE.
1 BUTTOCK LINE.
1½ BUTTOCK LINE.
2 BUTTOCK LINE.
3 BUTTOCK LINE.
4 BUTTOCK LINE.
CENTER LINE OF SHAFT (OUTER)
CENTER LINE OF SHAFT (INNER)
UPPER DECK SIDE LINE
MAIN DECK MIDDLE LINE
MAIN DECK SIDE LINE
LOWER EDGE OF ARMOUR
CENTRE LINE OF BILGE KEEL
UPPER EDGE OF ARMOUR & L.W.L.
A.W.L.
UPPER DECK SIDE LINE
& FLYING DECK SIDE LINE
4 BUTTOCK LINE

FLYING DECK SIDE LINE.

AT FULL BREADTH OF VESSEL.

C.W.L.

UPPER DECK SIDE LINE.

A.W.L.

MAIN DECK SIDE LINE.

MAIN DECK MIDDLE LINE.

MAIN DECK SIDE LINE. UPPER EDGE OF ARMOUR.

PROTECTIVE MIDDLE LINE.

MIDDLE DECK (FLAT)

L.W.L.

½ W.L.

1 W.L.

1½ W.L.

2 W.L.

2½ W.L.

3 W.L.

3½ W.L.

4 W.L.

4½ W.L.

5 W.L.

5½ W.L.

KEEL.

LOWER EDGE OF ARMOUR

LOWER EDGE OF ARMOUR

CENTRE LINE OF BILGE KEEL

4 BUTTOCK LINE.

(4 BUTTOCK LINE.)

FLYING DECK MIDDLE LINE.
SIDE.

UPPER DECK MIDDLE LINE.
SIDE.

A.W.L.

MAIN DECK MIDDLE LINE.
SIDE.

UPPER EDGE OF UPPER ARMOUR.

PROTECTIVE DECK MIDDLE LINE.

L.W.L.

1½ W.L.

LOWER EDGE OF ARMOUR & PROTECTIVE DECK SIDE LINE.

4 BUTTOCK LINE.

FLYING DECK SIDE LINE.
UPPER DECK SIDE LINE.
MAIN DECK SIDE LINE.
MAIN DECK MIDDLE LINE.
SIDE.
A.W.L.
UPPER EDGE OF UPPER ARMOUR.
PROTECTIVE DECK MIDDLE LINE.
L.W.L.
1½ W.L.
LOWER EDGE OF ARMOUR & PROTECTIVE DECK SIDE LINE.
4 BUTTOCK LINE.

FLYING DECK MIDDLE LINE.
" " SIDE.

UPPER DECK MIDDLE LINE.
" " SIDE.

A.W.L.

MAIN DECK MIDDLE LINE.
" " SIDE.

UPPER EDGE OF UPPER ARMOUR.

PROTECTIVE DECK MIDDLE LINE.

L.W.L.

½ W.L.

LOWER EDGE OF ARMOUR & PROTECTIVE DECK SIDE LINE.

FLYING DECK SIDE LINE.
UPPER DECK SIDE LINE.
MAIN DECK SIDE LINE.
A.W.L.

4 BUTTOCK LINE

(4 BUTTOCK LINE.)

3 BUTTOCK LINE

(3 BUTTOCK LINE.)

2 BUTTOCK LINE.

1½ BUTTOCK LINE.

1 BUTTOCK LINE.

½ BUTTOCK LINE

FRAME SPACE 4'-0" FRAME SPACE 3'-0"

FLYING DECK MIDDLE LINE.
" " SIDE.
C W.L.
B W.L.
UPPER DECK MIDDLE LINE.
" " SIDE.
A.W.L.
MAIN DECK MIDDLE LINE.
" " SIDE.
MIDDLE DECK (FLAT)
L.W.L.
½ W.L.
LOWER EDGE OF ARMOUR
2 W.L.
2½ W.L.
3 W.L.
3½ W.L.
4 W.L.
4½ W.L.
5 W.L.
5½ W.L.
BOTTOM OF KEEL LINE.

9 8 7 6 5 4 3½

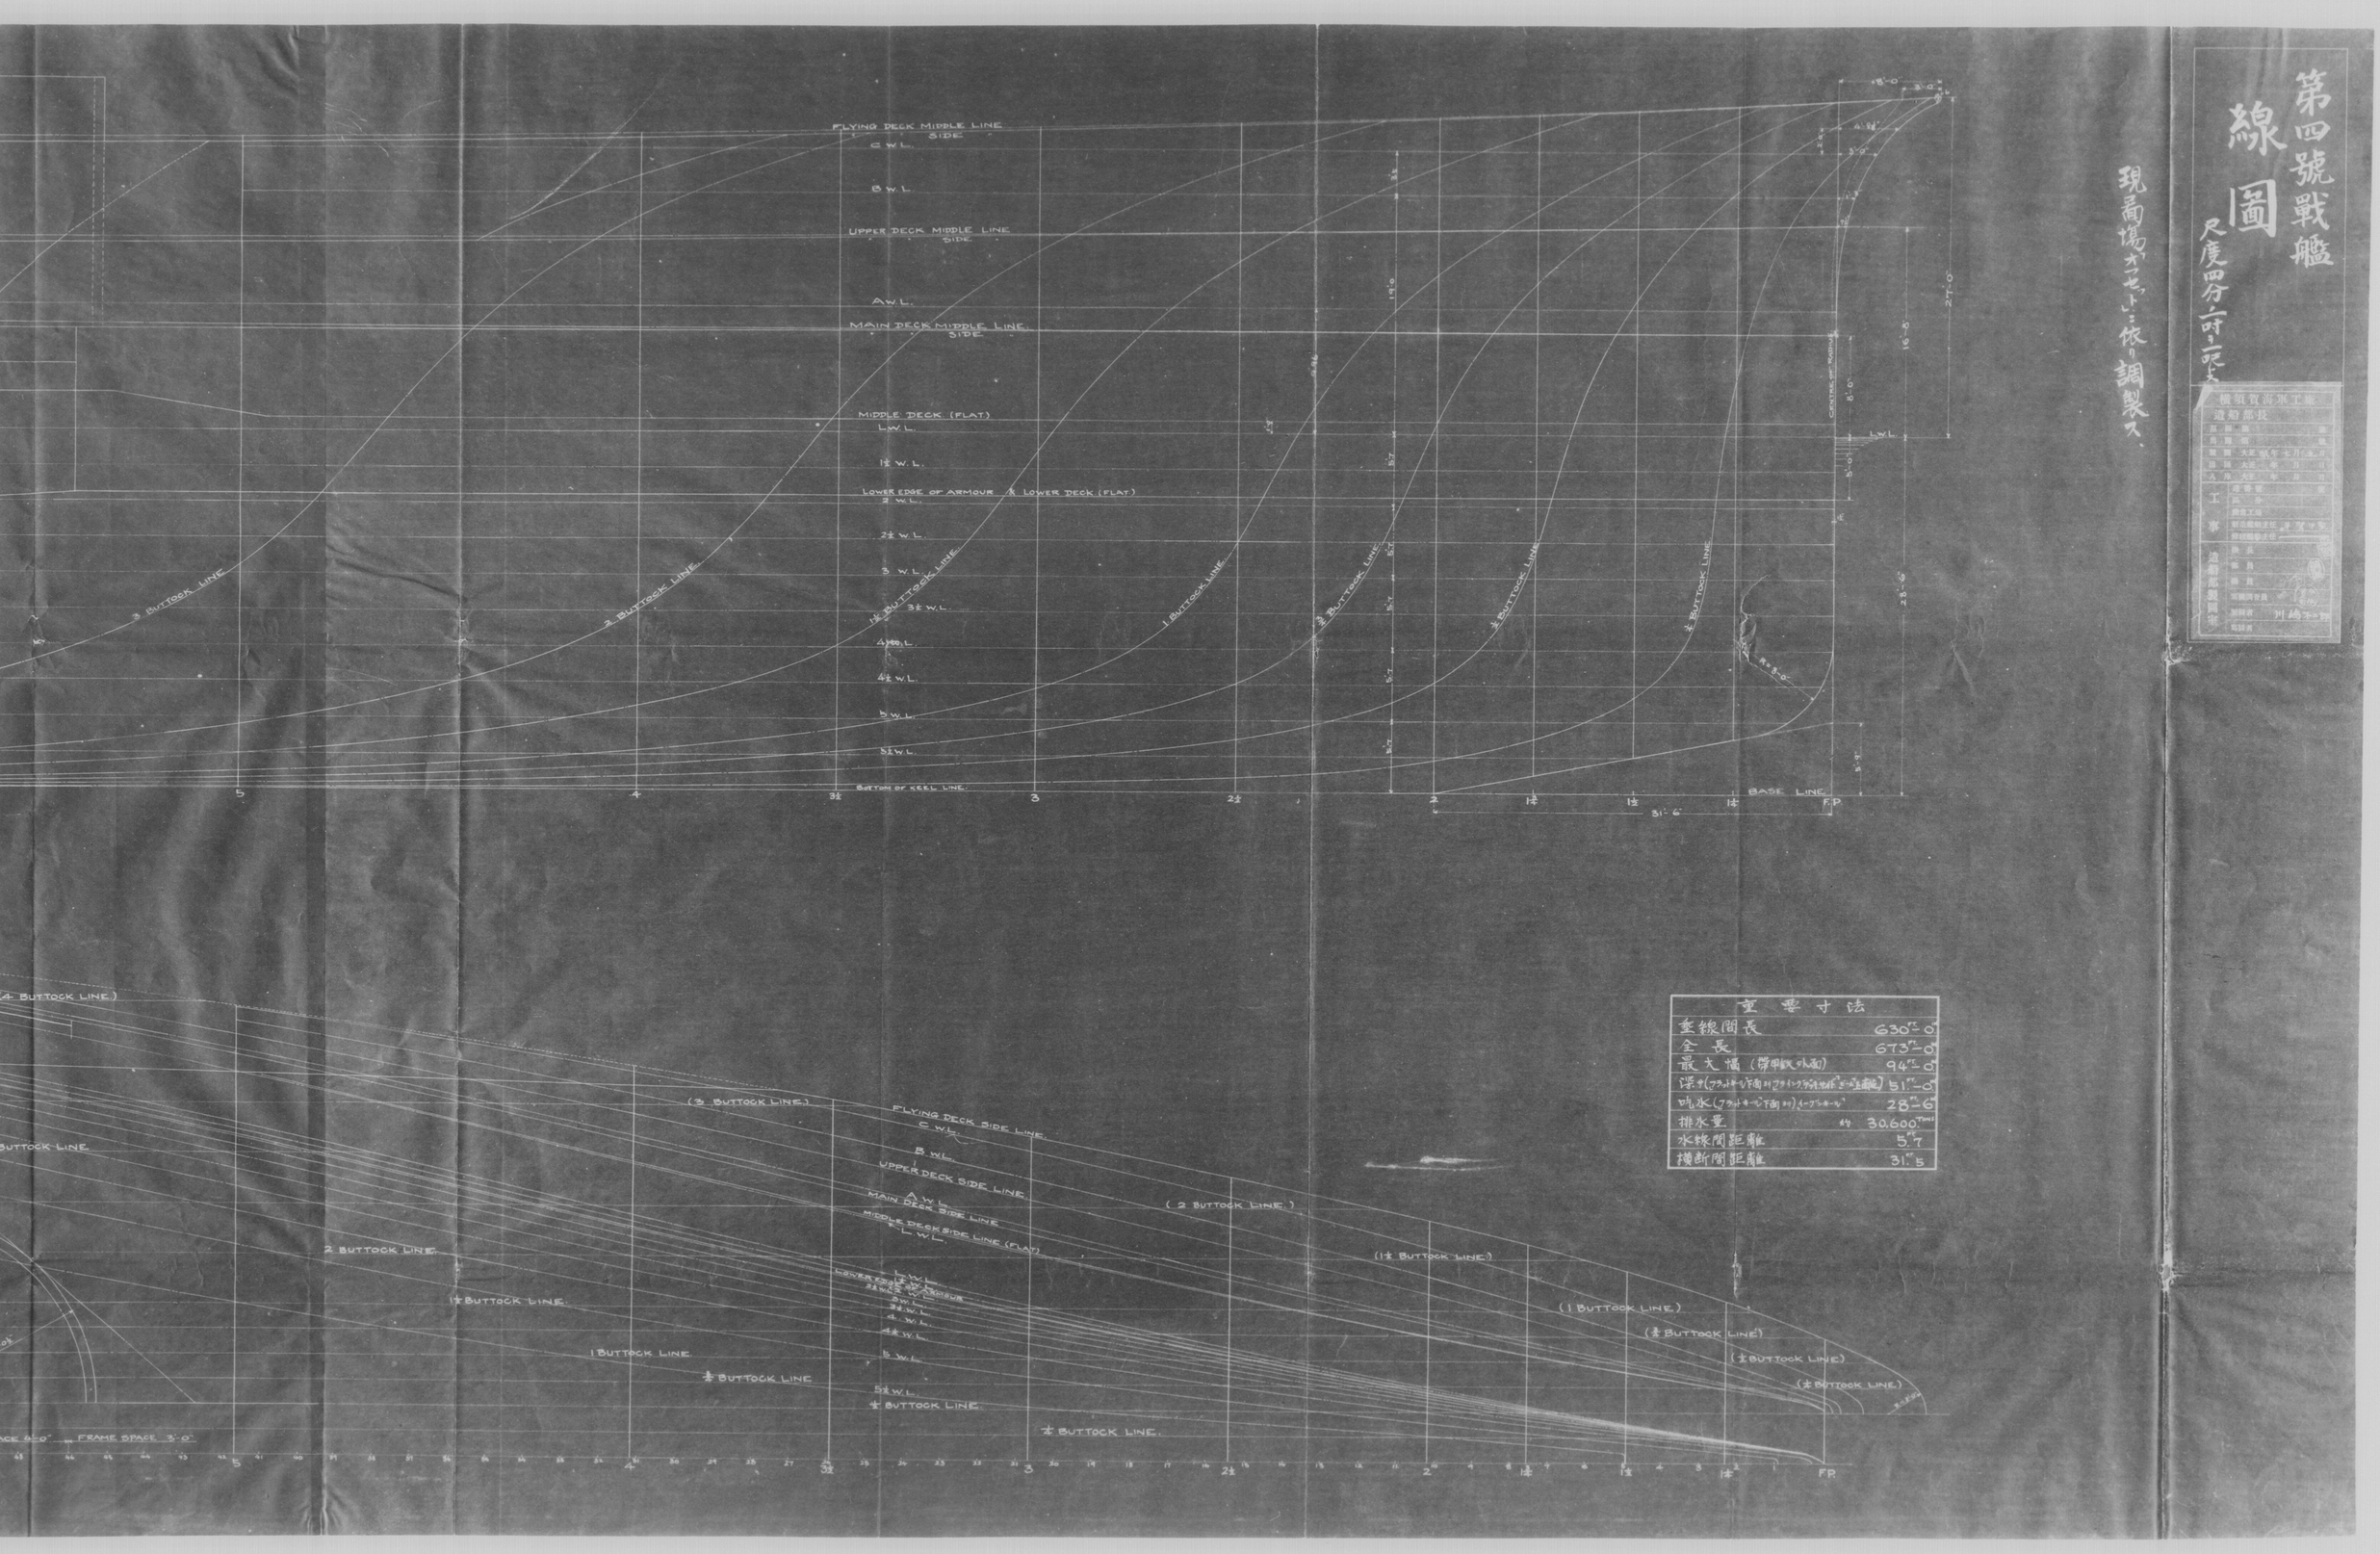

重要寸法	
垂線間長	630 FT.-0 IN.
全長	673 FT.-0 IN.
最大幅（帶甲鈑外面）	94 FT.-0 IN.
深サ（フラットキール下面ヨリフライングデッキサイド ビーム上面迄）	51 FT.-0 IN.
吃水（フラットキール下面ヨリ）メーブンキール	28 FT.-6 IN.
排水量 約	30,600 TONS
水線間距離	5 FT. 7
横断間距離	31 FT. 5